


Read all instructions before starting installation.




Scan for
[Installation
Instructions](#)
in Spanish


PARTS INCLUDED (Quantity varies by order)




Mounting Bracket(s)



Screws




Lift Handle(s)

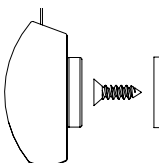

Hold Down Bracket(s)





OPTIONAL VALANCE

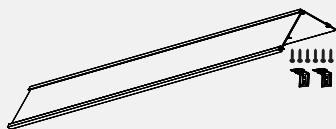

Valance Kit
(See Page 2 for Installation Instructions)


NOTE: Valances are optional. They are only included if specifically selected during your order. If your package does not include a valance, installation can proceed without them.

TOOLS NEEDED

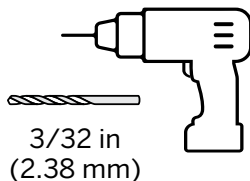

IF YOU ORDERED OPTIONAL FABRIC VALANCE


INSIDE MOUNT

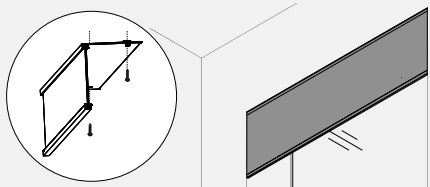

Flush Mount Depth Requirement: 3-1/8"
Minimum Mounting Depth Requirement: 1-1/4"

- Install the valance first, then proceed with shade installation.
- Valance can be mounted directly into the top of the window frame.
- Drill vertically through the pre-drilled slots.

OUTSIDE MOUNT

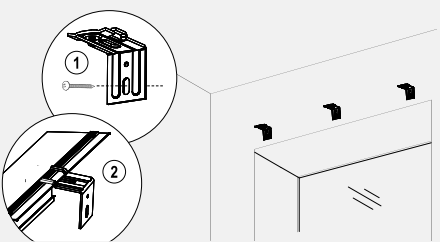

- Install brackets level and aligned to each other, using the screws provided.
- Slide valance under the clips that are on the top of the installation brackets.

INSTALLATION BRACKET INFORMATION

- For the shade to operate correctly, it's important that the brackets are mounted level.
- If needed, use shims to help adjust and align the brackets.
- The number and placement of brackets is the same whether you're installing inside or outside the window frame.


Shade Width	Bracket Quantity
Up to 36"	2
36-1/8" to 48"	3
48-1/8" to 60"	4
60-1/8" to 72"	5
72-1/8" to 90"	6
90-1/8" to 108"	7

CAUTION: Keep the "Do Not Remove Until Installation" paper wrap in place until the shade is completely installed.

1 PLACE SHADE IN DESIRED LOCATION AND MARK FRONT EDGE


DON'T FORGET: Before marking bracket locations, check clearance depth required to avoid obstructions such as window cranks or handles.

INSIDE MOUNT

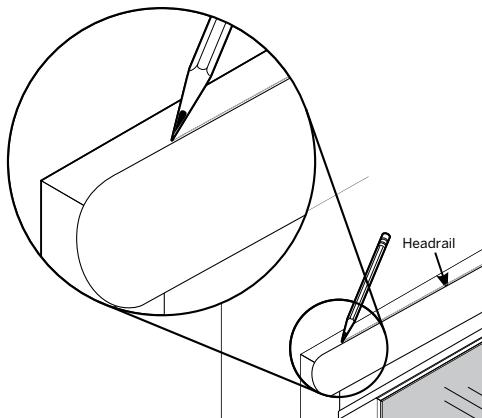

Minimum Depth	Fully Recessed
1-5/8"	2-1/8" to 4" (depending on roll diameter)


OUTSIDE MOUNT

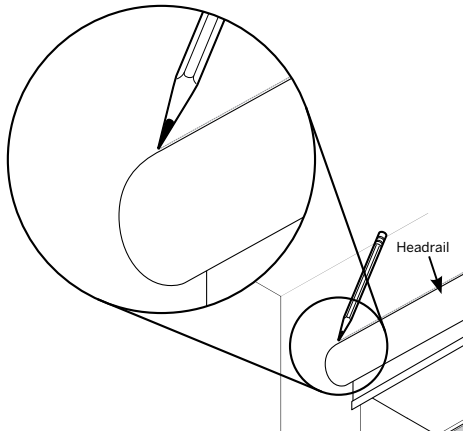


Minimum Height
1-5/8"



2 MEASURE 1-1/2" - 2 1/2" IN FROM SHADE EDGE ON BOTH ENDS AND MARK

INSIDE MOUNT


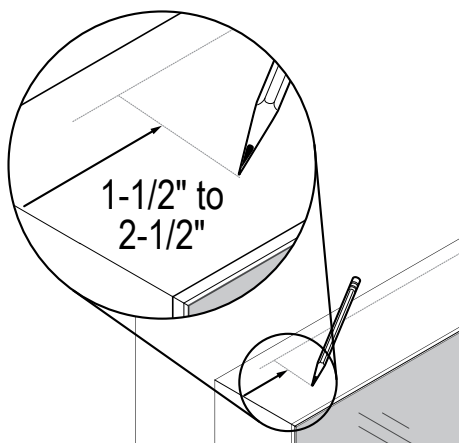


OUTSIDE MOUNT

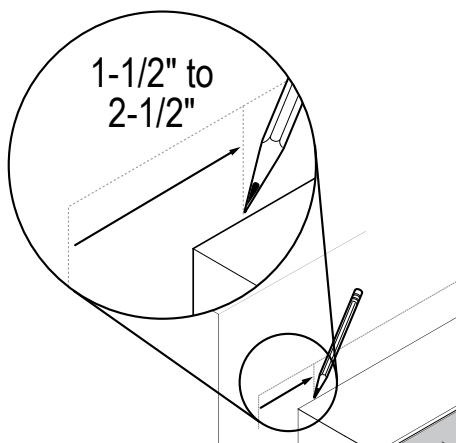

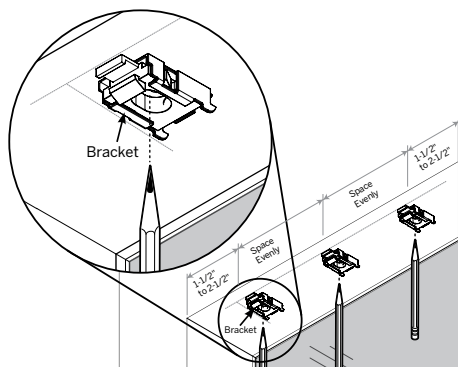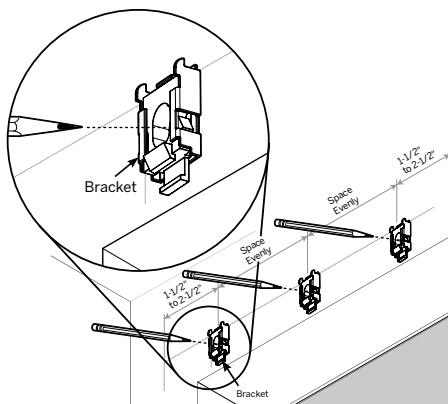3**MARK BRACKET LOCATION, CENTER ANY ADDITIONAL BASKETS IF APPLICABLE.****INSIDE MOUNT****OUTSIDE MOUNT**


IMPORTANT: For proper installation, Inside Mount brackets must have the clear tab facing toward the inside of the room. Outside Mount brackets must have the clear tab pointed toward the floor.

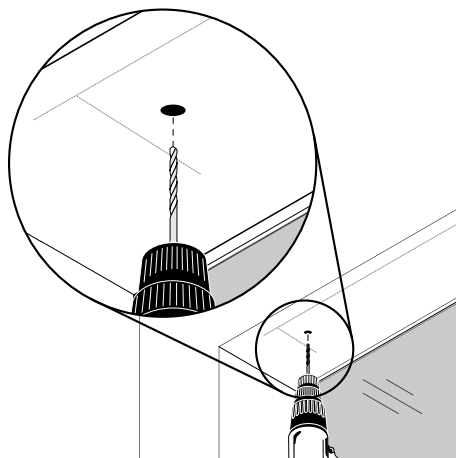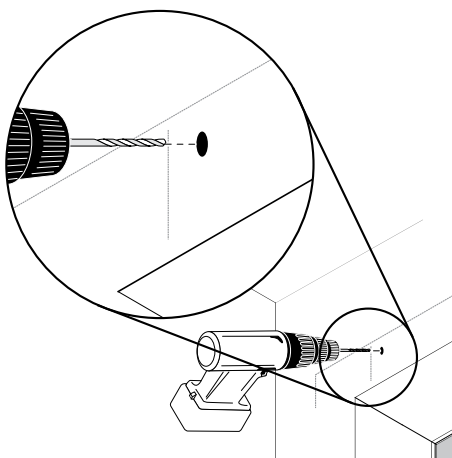4**PRE-DRILL HOLES USING A 3/32" DRILL BIT****INSIDE MOUNT****OUTSIDE MOUNT**


5

INSTALL MOUNTING BRACKETS USING SUPPLIED SCREWS

INSIDE MOUNT

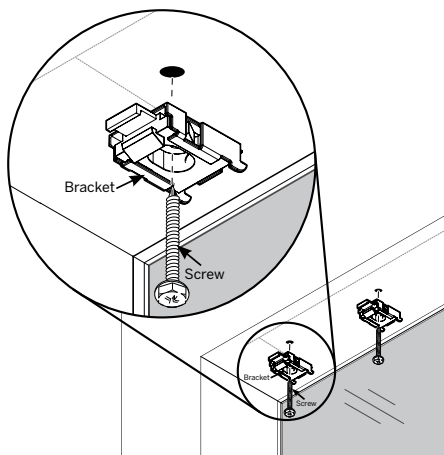

OUTSIDE MOUNT



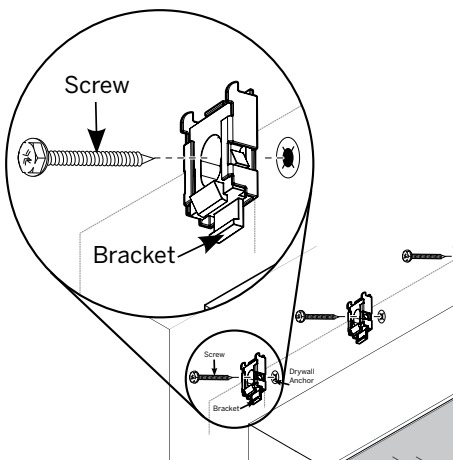


CAUTION: Use drywall anchors (not provided) when mounting into drywall. Failure to properly anchor shade could cause shade to fall possibly resulting in injury.

6

INSTALL THE HANDLE (IF YOUR PRODUCT CAME WITH A HANDLE)

The handle should be attached to the center of the bottomrail if the shade is 42" in width or less. First, insert one end of the handle, then rotate and push the handle upward against the bottomrail until it snaps in place.

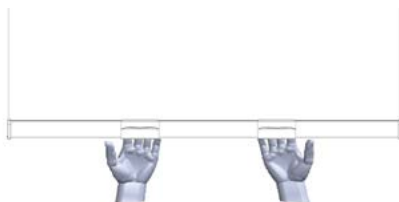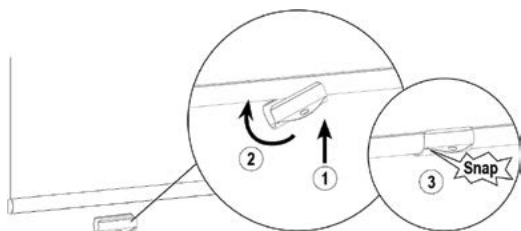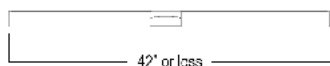


Shades over 42" in width will come with two handles per rail.

7


MOUNT THE SHADE INTO THE BRACKETS

INSIDE MOUNT

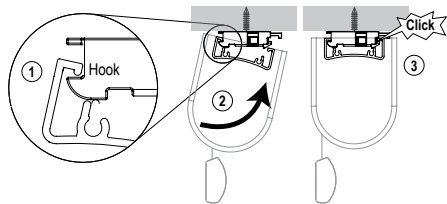

- Hook the back groove of the mounting bar onto the hook of the installation brackets located in the back of the bracket.
- Rotate the mounting bar toward the front clear tabs of the installation brackets.
- Push the bar until the tabs lock into place. You will hear a click when each bracket is secured in place



OUTSIDE MOUNT

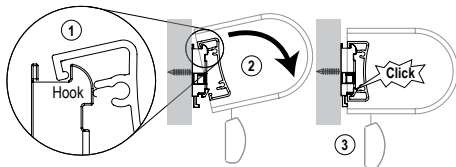

- Hook the top groove of the mounting bar onto the hook of the installation bracket located on the top of the bracket.
- Rotate the mounting bar downward toward the clear tabs of the installation brackets.
- Push the bar until the tabs lock into place. You will hear a click when each bracket is secured in place.

8


INSTALL THE END CAPS

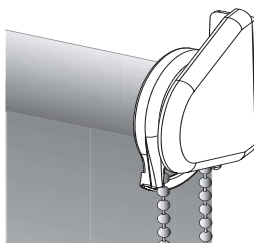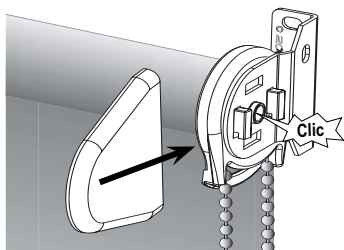

OPTIONAL – ATTACH THE HOLD-DOWN BRACKETS

Hold-down brackets prevent shades from swaying.

- Lower the shade to align the magnet with the location for the catch.
- Once the location has been identified, mark the position of the catch onto the wall by pressing the screw into the wall.
- Raise the shade and install the catch plate to the marking made and with the screw provided.
- When shades are fully lowered and the bottom rail is attached to either hold down brackets, detach the bottom rail from the catch plate before raising the shade.

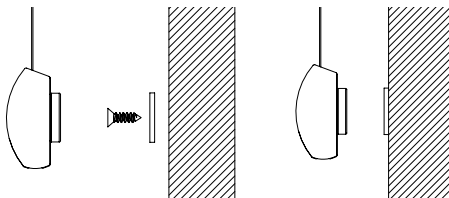

IMPORTANT: The magnets will be pre-installed onto the bottom rail.
The round catch plate will be provided.


OPERATION

RAISE AND LOWER SHADE

Raise and lower the shade by holding the handle in the center portion of the bottomrail to ensure level movement.

REMOVING THE SHADE


INSIDE MOUNT

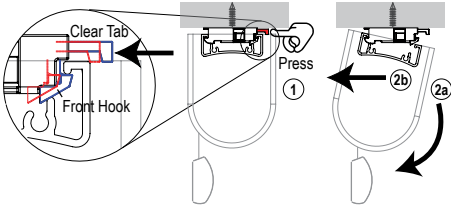

To detach the shade from the mounting brackets:

- Press the clear tab on each bracket to release the front hook.
- Rotate the front edge of the mounting bar downward.
- Then push it slightly backward to release the rear of the profile from the back hook of each bracket.

OUTSIDE MOUNT

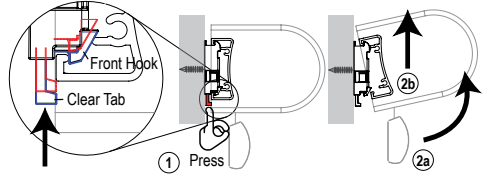


To detach the shade from the mounting brackets:

- Press the clear tab on each bracket to release the bottom hook.
- Rotate the bottom edge of the mounting bar upward.
- Then lift it slightly upward to release the top of the profile from the back hook of each bracket.

ADJUSTING THE TENSION


Follow shade removal instructions noted above to remove the shade from the installation bracket.

1. Remove the bracket cover by pulling the cover down.
2. Pull the cover outward to remove.

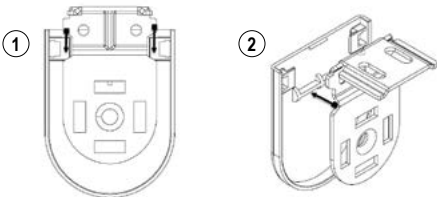

3. Use 5mm Allen Wrench to turn the spring head (left side for standard roll and right side for reverse roll).
 - Turn clockwise to add/increase tension.
 - Turn counterclock to decrease/reduce tension.

4. After adjustments are completed, reattach the cover onto the bracket. See image #4.
5. Push the cover up onto the bracket until it snaps securely. See image #5.

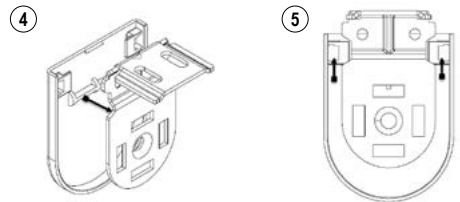

6. Reinstall the shade onto the installation brackets.

TROUBLESHOOTING


Problem	My shade won't snap into the installation brackets.
Solution	Ensure installation brackets are aligned and level. Shim the brackets if necessary to achieve a level alignment.
Problem	My shade is difficult to raise (or lower), or will not raise (or lower) at all.
Solution	• Shades cannot be forced into tight inside mount window openings. If an inside mount, check that the shade is installed correctly. Make sure there is clearance between the ends of the shade and the window casement. • Check that the installation brackets are level. Shim to level, if necessary. • If hold-down brackets are used, make sure they have been released. • Make sure the fabric is not caught.
Problem	My shades are uneven when raising or lowering, or the bottom rail is uneven when still.
Solution	• Check that the installation brackets are level. Shim to level, if necessary. • Check that the window is square by measuring the diagonals.

IMPORTANT INFORMATION REGARDING CORDLESS SHADE OPERATION

- Daily operation of shade will ensure that it performs at its optimal level.
- If the shade is in the lowered position for an extended period of time, extra care needs to be taken when raising the shade. The fabric will relax and may resist lifting. This is a natural occurrence with all fabric shades. When lifting, you may notice the billowing (falling out) toward you. This is temporary and can be corrected by slowly raising the shade completely and then operating several times. This allows the shade to operate as designed.
- If shade has been in the fully raised position for an extended period of time, it may have a tendency to "spring back" above the desired length of the shade. This is temporary and can be corrected by completely raising the shade and operating several times.
- Operating the shade with the handle(s) provided is recommended so that the shade is balanced when raising and lowering.

CHILD SAFETY

⚠ WARNING ⚠ ADVERTENCIA

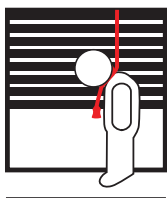

Window Blind Cord Strangulation Risk

Window blinds with a damaged or loose tension device or retractable cord that fails to fully retract pose a strangulation risk to children. To avoid this potential strangulation risk, consider purchasing cordless products or products with inaccessible cords.

Riesgo de Estrangulamiento en Cuerdas de Persianas

Las persianas con un dispositivo tensor suelto o dañado o con una cuerda retráctable que no se ajusta completamente representan un riesgo de estrangulación para los niños. Para evitar un posible riesgo de estrangulamiento, considere comprar productos inalámbricos o productos con cuerdas inaccesibles.